


The tape head can be supplied by 230 v AC or 12/24 v DC

The hand winding output contacts will only work when supplied by 12/24 volts DC backup supply

240/110 AC for mains use

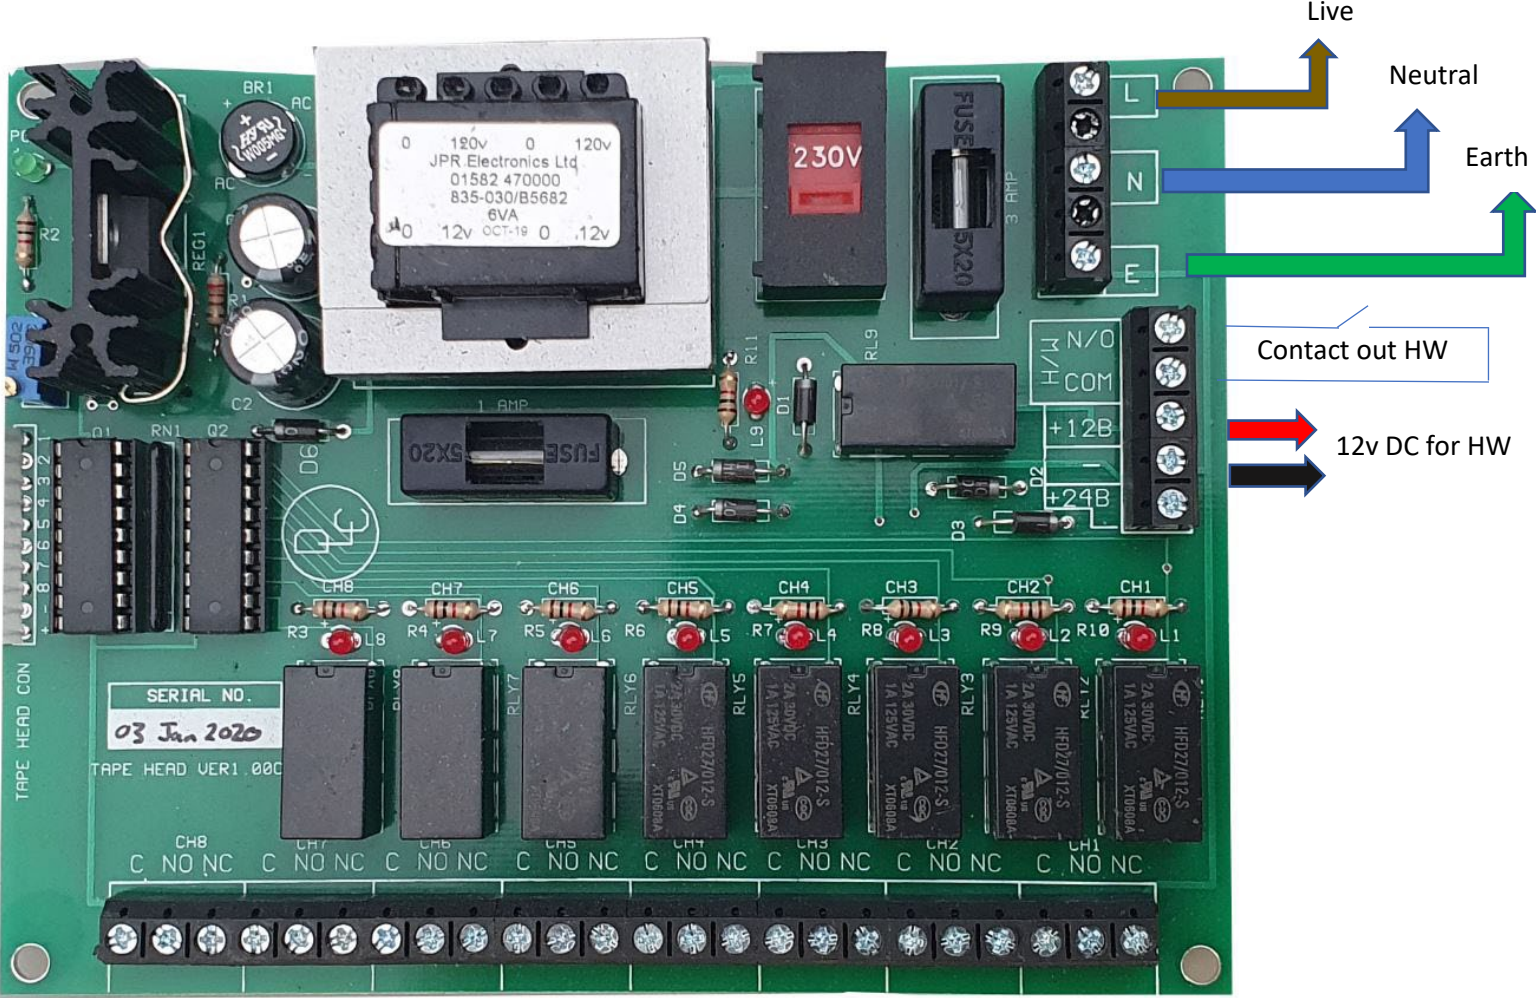

8 channel Volt free changeover contacts