


## Rail Alignment Started Kit

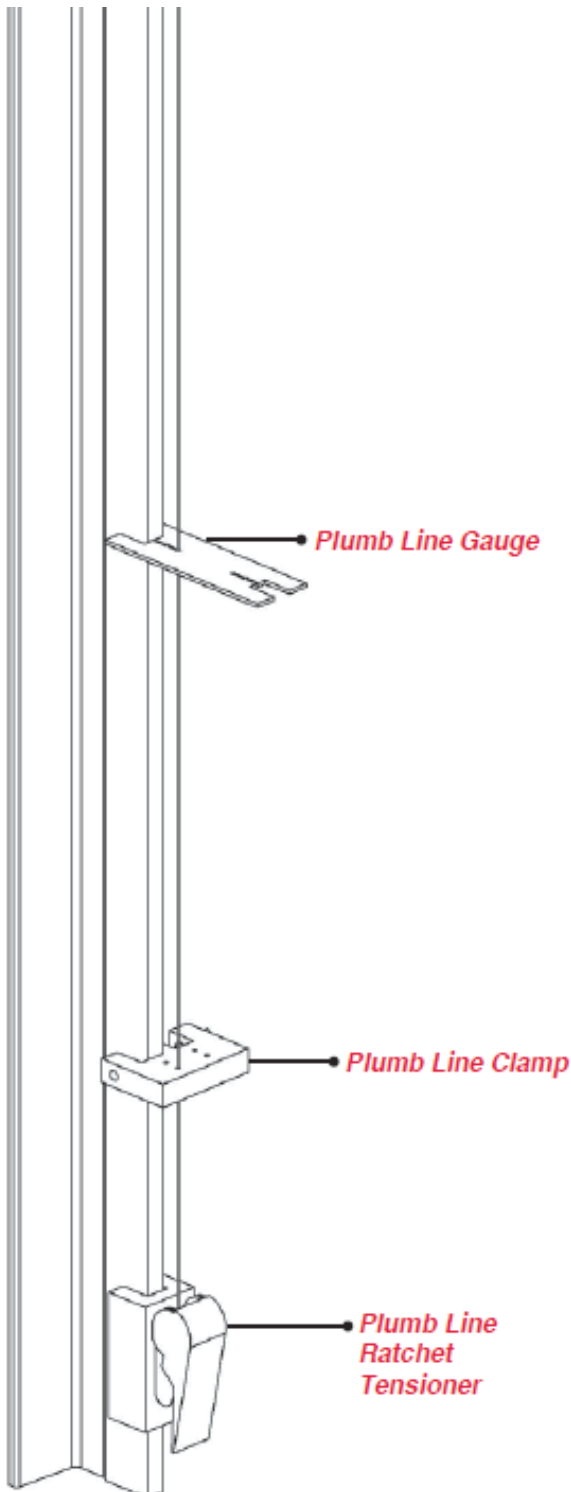

### INSTRUCTIONS

#### PLUMB LINE GAUGE

Part No. 10-200, 10-210, 10-211, 10-220, 10-230

1. Slide gauge over face of rail.
2. Check to be sure that the plumb line is centered in the proper hole.
3. If necessary, adjust the rail until the plumb line is centered in the proper hole

#### PLUMB LINE CLAMP

Part No. 10-150, 10-152, 10-160, 10-170

These clamps have been designed to accurately secure the plumb line 1/2" or 1" from the center of the rail face. Position plumb line clamp securely on the rail making sure the clamp is tight against the rail face. Tightening the special cup-point screw, pull the clamp securely into place. Once the plumb line clamp is attached to the rail, a .029 diameter or smaller piano wire can be placed through one of the two holes and secured. They are made of high-strength, lightweight aluminum.

#### PLUMB LINE RATCHET TENSIONER

Part No. 10-195, 10-196

Quick and easy to use: Simply slip it over the rail face, tighten the two bolts provided, swing open ratchet handle, feed your plumb line through the slotted cylinder and tighten to desired tension. The ratchet maintains tension at all times, and makes it very easy to re-tension if required. The body is made of lightweight aluminum; ratchet is plated steel for longer life. Designed to be used directly below our plumb line clamp.



Part No. 10-205